



AquaMat® Marine Flooring - Template Instructions

- Steps:**
- 1 - Create Pattern
 - 2 - Mark Template
 - 3 - Cut & Check Template
 - 4 - Mail Template

You can use your own materials or one of our AquaMat® Template Kits. All you need is a pattern material, such as durable, brown craft paper, or a heavy plastic (min 6mil) that will not stretch when pulled tight or hold a crease, marking pen, straight edge, scissors and packing, masking or painters tape.

NOTE - Teak Patterns require an additional step.

Steps 1 - Create Pattern

CHOOSE FROM THE TWO OPTIONS BELOW- (EXISTING MAT OR TEMPLATE FROM SCRATCH)

Option 1: Trace Pattern from Existing Mat

- Lay template material flat on hard surface
- Lay existing mats on template material and trace each one carefully, avoiding any slipping or movement of mats
- Draw around pedestal seats, table holes and any other areas that you want. Use dash lines to indicate slits, such as access slits for table holes and hatch lid flaps
- Make sure all corners are rounded - 1" radius as shown in picture in step - 2. Round like a .25 quarter.


Option 2: Create a New Template from Scratch

- Lay template material on the floor of boat, arranging material to lie flat
- Leaving 1/2" gap around the edges for drainage, draw or cut around edges of desired mat pieces. Be careful to avoid any slipping or movement of material
- Make sure all corners are rounded as shown in picture
- Continue to draw or cut around pedestal seats, table holes and any other areas that you want. Use dash lines to indicate slits, such as access slits for table holes and hatch lid flaps

Step 2 - Mark Template

Mark Each Piece:

- Arrow showing direction of bow
- *Top* written on the side that will face up when complete
- Your Name and Phone Number
- Pieces Included (marked as 1 of 3, 2 of 3, etc)
- Carpet color and style name
- TEAK patterns require an additional step. Please see the "Making a pattern for TEAK or TEAKFUSION™"

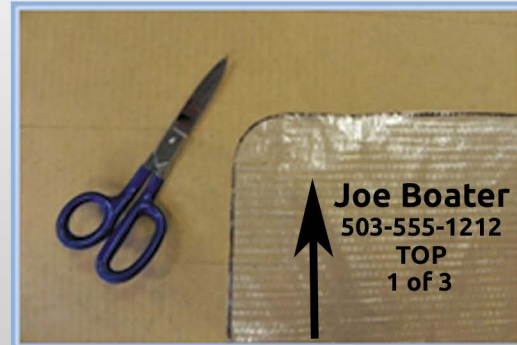

Step 3: Cut & Check Template

- Cut template along lines you have drawn, including seats, table holes & bolsters & hatches (do not cut access slits as it could distort the piece)
- There will be a \$100+ fee for templates not cut out completely
- Reinstall the template on your boat to check for fit. This is a very important step. Do not skip this step!
- Make sure the template lies flat, with no bubbles or wrinkles. Your new AquaMat® marine flooring will be an exact representation of your template. All corners, inside and out, will be rounded. Make any adjustments necessary before shipping
- For optimum interpretation of your template pattern, roll it and package it in a shipping tube or template kit box. Folding your completed template may cause creases or wrinkles which could impact fit

Send Completed Pattern to:

Corinthian Marine
Custom AquaMat Department
2000 SE Milport Road
Portland, OR 97222

Upon Receipt of your template:

Once we receive your template you will be contacted with the final price. Production of your AquaMat® marine flooring will begin immediately upon your approval and will normally ship within 14 days. We guarantee the AquaMat® will exactly duplicate the template you provide and every custom AquaMat® has a 5-year warranty.

Note: \$150 Fee to send in your existing flooring, and an additional 2 weeks for production. We do not guarantee an exact fit. Primarily because carpet can stretch and lose its shape over time, making it a poor choice as a pattern. We suggest option 1 above for proper fitment.

Pattern Returns: Patterns are kept on file for 90 days. We will be happy to return patterns at your request, but finished mat must be received and approved, first. Customer is responsible for return shipping charges.