

AQUAMAT® MARINE FLOORING - TEMPLATE INSTRUCTIONS

- STEPS:**
1. Create Template
 2. Mark Template
 3. Cut & Check Template
 4. Mail Template

NOTE - Teak Patterns Require an Extra Step

You can use your own materials or one of our AquaMat® Template Kits. All you need is a pattern material, such as a durable craft paper, heavy plastic (min 6mil) or TyVek house wrap, that will not stretch when pulled tight or hold a crease, marking pen, straight edge, scissors and tape (painters tape works best).

STEP 1 - CREATE PATTERN

Choose from the two options below (Existing mat or template from scratch)

Option 1: Trace Pattern from Existing Mat

- Lay existing mats on template material and trace each one carefully, avoiding any slipping or movement of mats
- Draw around pedestal seats, table holes and any other areas that you want. Use dash lines to indicate slits, such as access slits for table holes and hatch lid flaps
- Make sure all corners are rounded - 1" radius as shown in picture in step - 2. Round like the edge of a quarter


Option 2: Create a New Template from Scratch

- Lay template material on the floor of boat, arranging material to lie flat
- Leaving 1/2" gap around the edges for drainage, draw or cut around edges of desired mat pieces. Be careful to avoid any slipping or movement of material
- Make sure all corners are rounded as shown in picture
- Continue to draw or cut around pedestal seats, table holes and any other areas that you want. Use dash lines to indicate slits, such as access slits for table holes and hatch lid flaps

STEP 2 - MARK TEMPLATE

Each Piece Should Have:

- Arrow showing direction of bow
- *Top* written on the side that will face up when complete
- Your Name and Phone Number
- Mark Snapless locations with ⊗
- Pieces Included (marked as 1 of 3, 2 of 3, etc)
- Carpet color and style name
- TEAK patterns require an additional step. See: AquaMat® Marine Flooring - Teak Template Instructions

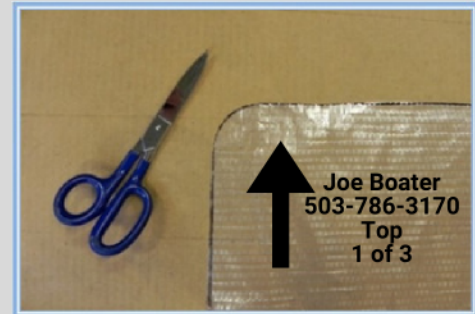

STEP 3 - CUT & CHECK TEMPLATE

- Cut template along lines you have drawn, including seats, table holes & bolsters. Internal hatches do not have to be cutout (access slits can be cut if needed to test fit, tape back together before shipping)
- There will be a \$150+ fee for templates not cut out properly
- Reinstall the template on your boat to check for fit. This is a very important step. Do not skip this step!
- Make sure the template lies flat, with no bubbles or wrinkles. Your new AquaMat® marine flooring will be an exact representation of your template. All corners, inside and out, will be rounded. Make any adjustments necessary before shipping

NOTE: \$150+ Fee to send in your existing flooring as it, and an additional 2 weeks for production. We do not guarantee an exact fit. Primarily because carpet can stretch and lose its shape over time, making it a poor choice as a pattern on it's own. Instead, use that existing flooring to create a pattern as outlined in Step 1, Option 1.

Send Completed Pattern to:
Corinthian Marine
Custom AquaMat Department
2000 SE Milport Road
Portland, OR 97222

Upon Receipt of your Template:

You will be contacted with the final price. Production of your AquaMat® marine flooring will begin immediately upon your approval and will normally be completed in 10 business days. We guarantee the AquaMat® will duplicate the template you provide. Every custom AquaMat® has a 5-year warranty.

Pattern Returns: Patterns are kept on file for 90 days. We will be happy to return patterns at your request, but finished mat must be received and approved, first. Customer is responsible for return shipping charges